


SPA Insulation Cover Lifter Installation Instruction (cover stand ii)

Box Contains:

- (1) 1 x Upper Support Frame & Vertical Support Frame Assy with
 - * 2 x Rubber Buffer.
 - * 4 x St4.8x19 S/S Self-tapping Screw
 - * 1 x S/S Safety Locking Chain
 - * 1 x Gas Strut 450N.
 - * 2 x S/S M8x40 Hex Head Bolt
 - * 2 x S/S M8 Locknut
 - * 4 x S/S M8 Plain Washer
 - * 2 x S/S M12x25 Hex Skt Button Head Bolt
 - * 4 x S/S M12 Plain Washer.
- (2) 1 x Right Turnable Arm with 1x Spring Pin, 1x EVA foam.
- (3) 1 x Left Turnable Arm with 1x Spring Pin, 1 x EVA foam
- (4) 2 x Adjustable Arm with Tube Sleeve.
- (5) 1 x Right Base Standing Leg & (6) 1 x Left Base Standing Leg
- (7) 1 x Base Plate.
- (8) 1 x Base Limit Plate
- (9) 1 x User instruction
- (10) 1 x Kit bag

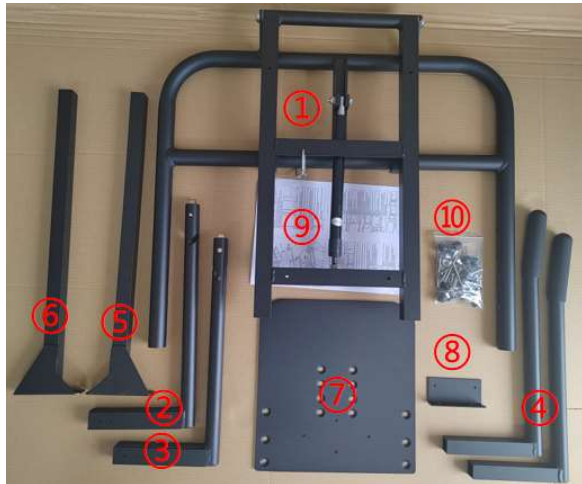


Kits Bag Contains:


- (1) 8 x M8 x 20 S/S Hex Skt Flat Head Bolt.
- (2) 6 x M8 S/S Domed Nut.
- (3) 2 x S/S Pull Pin $\Phi 8 \times 51$
- (4) 4 x St4.8x60 S/S Flat Head Screw
- (5) 2 x St4.8x40 S/S Flat Head Screw.
- (6) 1 x 3.2mm drill bit
- (7) 1 x screwdriver head
- (8) 1 x 5mm Allen Key.
- (9) 10 x St4.8x19 S/S Self-tapping screw.
- (10) 4 x M8 Nut Cap
- (11) 14 x Screw Cap
- (12) 6 x S/S Plain Washer
- (13) 6 x S/S Split Washer
- (14) 1 x 13mm Open Spanner



Step 1: Fix 2x Base Standing Legs on the Base Plate with 6x M8 x20 S/S Hex Skt flat head bolts, 4x M8 S/S domed nuts (a), 4x S/S Split washers (b) and 4x S/S plain washers (c) (Fig.1- Fig.3).

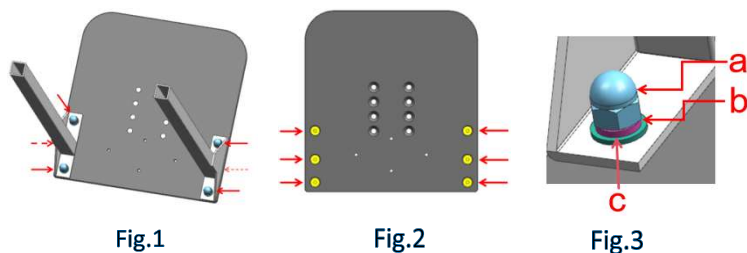

Step 2: Fix the Base Limit Plate on the Base Plate with 2xM8 x20 S/S Hex Skt flat head bolts, 2x M8 S/S domed nuts (d), 2x S/S split washers (e), and 2x S/S plain washers. (f)(Fig.4 – Fig.5)

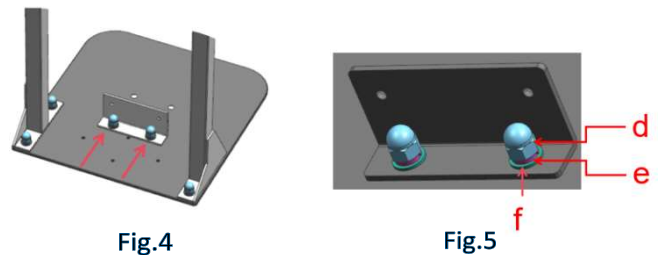

Step 3: Insert the Adjustable Arms into the Left & Right Turnable Arms.(Fig.6) Adjust and confirm the inner width.(Fig.7), Fix 2x St4.8x19 S/S self-tapping screws each from holes inwards and cover the screw caps.(Fig.8)

Step 4: Insert the Turnable Arms into the U-tube at suitable position and push into the $\Phi 8 \times 51$ pull pin to stop it. Lock the Safety Locking Chain around two parts.(Fig.9)

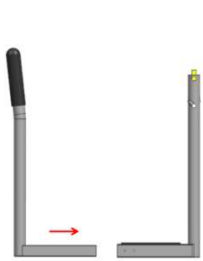


Fig.6



Fig.7



Fig.8

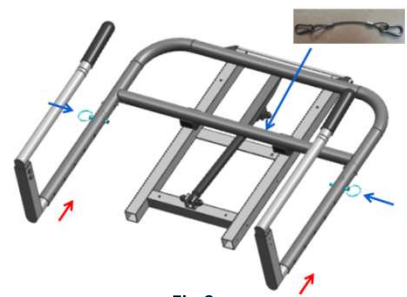


Fig.9

Step 5: Move assembled rack close to the SPA. Insert the Base Plate Into the underside center of SPA.(Fig.10),ensure the Limit Plate touch the SPA. Fix 2xSt4.8x40 S/S self-taping screws and cover two screw caps.(Fig.11)

Step 6: Push the entire main frame into the Left & Right Base Standing Legs vertically.(Fig.12) Loose the Safety Lock-ing Chain and flip up the U tube and Turnable Arms to the same level to the SPA top edge.(Fig.13)

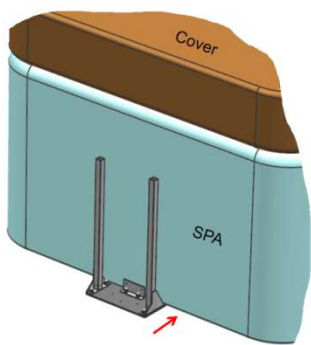


Fig.10

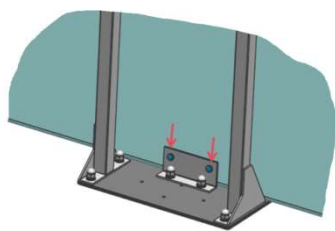


Fig.11

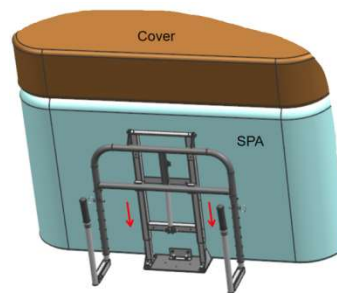


Fig.12

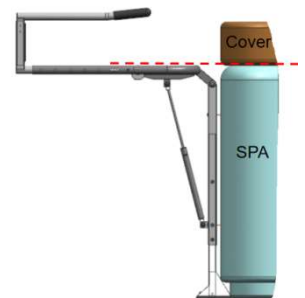


Fig.13

Step 7: Drill and fix 3xSt4.8x19 S/S self-tapping screws on each side. (Fig.14) Drill and fit 4xSt4.8x60 S/S self-tapping screws. The lower two screws to fit or not as necessary. (Fig.15)

Step 8: Slide the cover to the Turnable Arms and flip it down to vertical position. (Fig.16-Fig.17)

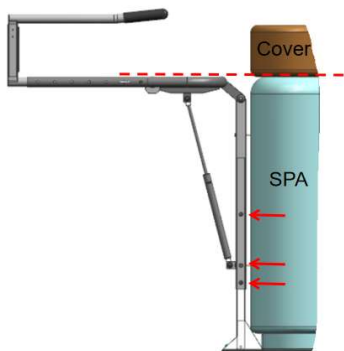


Fig.14

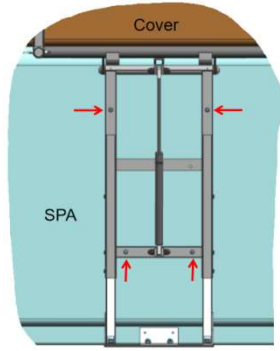


Fig.15

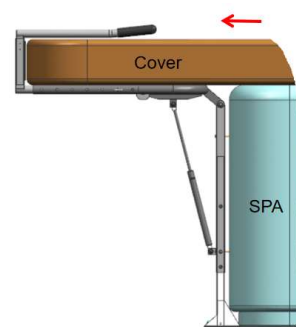


Fig.16

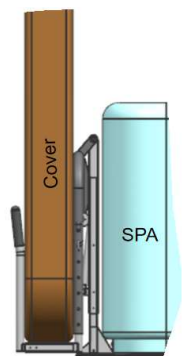


Fig.17

Step 9: Repeat these steps conversely to fit cover on the SPA. (Fig.18)

Step 10: When no use, fold the main frame and turn the Left & Right Turnable Arms inwards and lock the Safety Locking Chain.(Fig.19)

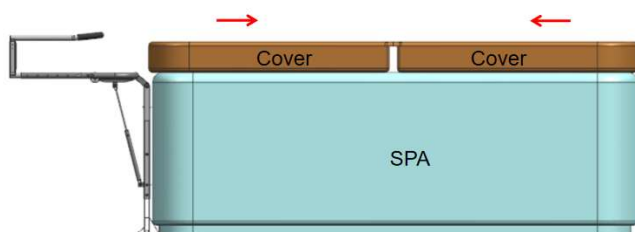


Fig.18

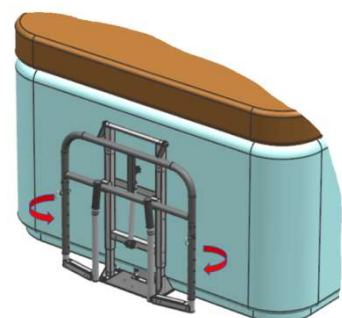


Fig.19

- * Make sure that you have all parts from the part list.
- * Note: All left and right directions are from standing in front of Hot Tub.
- * Note: Scan below QR code to get more installation details .

Iss.0 13-Oct-2024